

## **Quick Start for the LCIC-WIM / Wim Mode**

(For full documentation refer to LCIC-WIM.PDF, LCIC-WIM-WIM-MODE.PDF, Weighing Axles Instructions.PDF & Correction Factors.PDF.)

1. Copy the supplied CD to your disk.
2. Connect the LCIC-WIM board to your PC using the USB cable (supplied).
3. In the 'Found New Hardware Wizard' browse to the  
**"FTDI - VCP (Virtual COM Port) Driver"**  
folder in your copy of the CD.
4. It might occur that after you click Finish you'll have to repeat the procedure once more.
5. Run the following setups:
  - \* LCIC-WIM-CALIBRATION
  - \* LCIC-WIM-MONITOR
  - \* LCIC-WIM-SETTINGS
  - \* LCIC-WIM-AXLE
  - \* LCIC-WIM-FILTERS-SIMULATOR
6. Run the Calibration program (LCIC-WIM-CALIBRATION).
7. Run the Settings program (LCIC-WIM-SETTINGS).
8. Run the Axles program (LCIC-WIM-AXLE).